

PART# MT-2000


RADAR DETECTOR POWER CORD WITH
INLINE FUSE AND RJ11 CONNECTOR




INSTALLATION INSTRUCTIONS FOR THE CORVETTE C6 REAR VIEW MIRROR




1 - Sit in the driver's seat and reposition the rear view mirror towards the passenger side of the vehicle as far as it will go. This will allow better access to the mirror's wire harness.

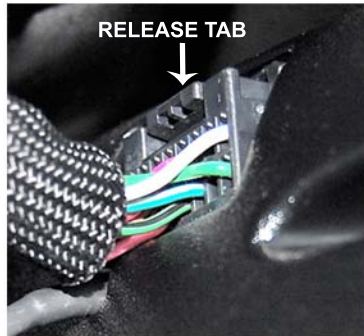


2 - Put your left hand behind the mirror and locate the release tab on the mirror harness plug as shown above. Push the release tab down and pull the plug out of the mirror. You may have to wiggle the plug from side to side as you are pulling.

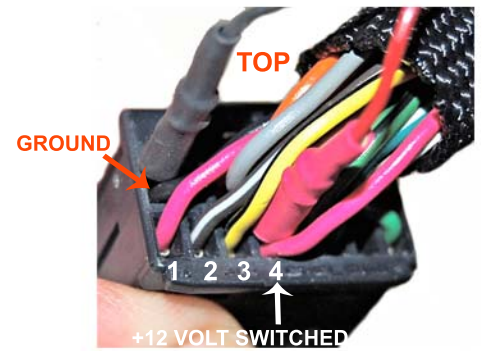

3 - Insert the two prongs of the MirrorTap Power Cord (MTPC). The black prong wedges against the top of the black ground wire and the red prong wedges against the top of the pink +12 volt switched wire as shown above.

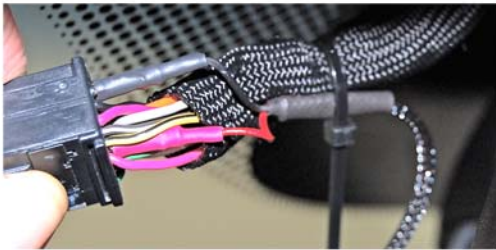

4 - Secure the MTPC to the mirror's wire harness using the supplied cable tie. Depending on how far up the mirror wire harness you place the cable tie will determine the distance of the MTPC to the radar detector which will help eliminate excessive slack.

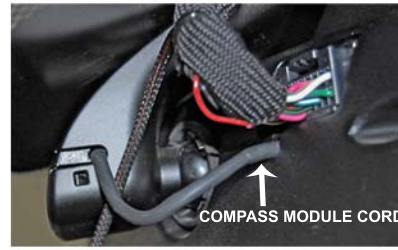

5 - Plug the mirror's wire harness back into the mirror. If your mirror has the compass module cord, route the MTPC as shown above. This will keep the MTPC nice and close to the center of the mirror when viewed from outside the vehicle.